

# SHARP

## Sharp LCD-TV – XBOX 360 Setup

Sharp LCD-TV's work with the XBOX 360 using the component cable supplied with the XBOX 360 Premium Edition.

Depending on the LCD-TV that you are using, you may have to use the 3 RCA to 15-pin D-sub adapter cable supplied with the Sharp LCD-TV.

Please ensure you have the following equipment before starting:

**3 RCA to 15-pin D-sub adapter (Supplied with Sharp LCD-TV)**

**HD AV Cable (Supplied with XBOX360 Premium Edition or can be purchased separately)**

**Remote control for LCD-TV**

**XBOX 360**

**XBOX 360 controller**

Sharp LCD TV's can be configured to work with the XBOX 360 as follows:

 
### Configuring your Sharp LCD-TV

Before you connect your XBOX 360, please ensure that you have told your LCD-TV that you are going to use component signal input.

Using the Sharp LC-42XD1E as an example:

1. Press the "Menu" button on the remote control.
2. Using the cursor arrows on your remote control, move to "Connections" and press the "OK" button.
3. Using the cursor arrows on your remote control, move to "Input Select" and press the "OK" button.
4. Using the cursor arrows on your remote control, move to "EXT4".
5. Using the cursor arrows on your remote control, move to "COMPONENT" and press the "OK" button.
6. Press the "END" button on your remote control.

**Note – Please consult your operation manual for other models.**

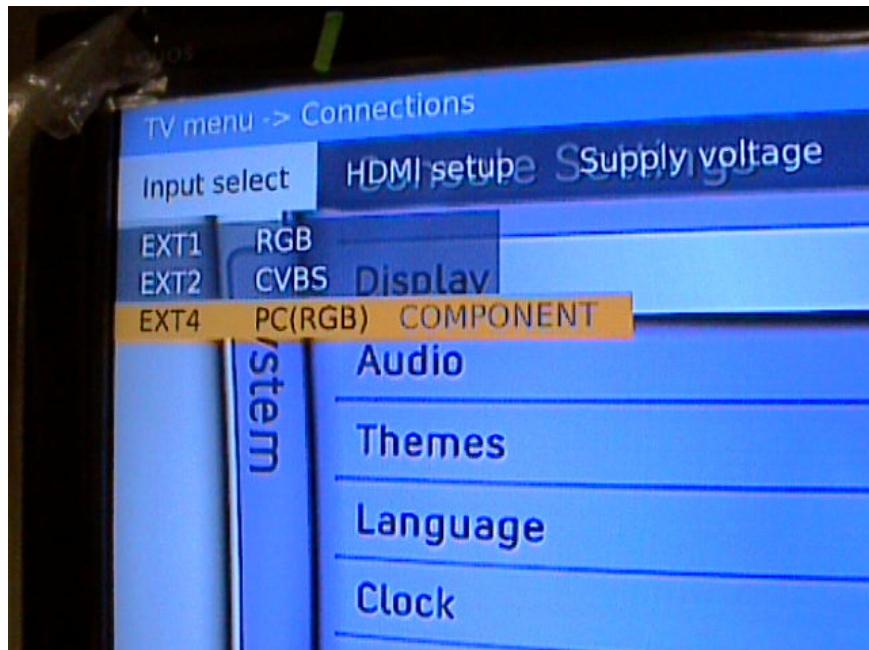

SHARP ELECTRONICS (UK) LTD  
TECHNICAL SUPPORT  
TECHNICAL SERVICES GROUP

# SHARP

## Connecting your XBOX 360

Before you can configure your XBOX 360, you need to ensure the cable to your Sharp LCD-TV has been configured correctly.

 
Using the HD AV Cable supplied with the XBOX 360 Premium, using the 3 RCA to 15-pin D-sub adapter cable supplied with the Sharp LCD-TV, using the Sharp LC-42XD1E as an example:

**Note – Please ensure that all of your equipment is turned off.**

1. Connect the HD AV cable to the XBOX 360 and ensure the settings switch has been moved to “HDTV”



2. Connect the HD AV cable to the 3 RCA to 15-pin D-sub adapter cable using the corresponding colours.

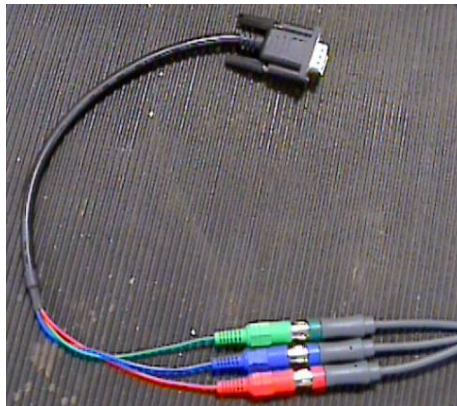

3. Connect the 3 RCA to 15-pin D-sub adapter cable to your LCD-TV.



SHARP ELECTRONICS (UK) LTD  
TECHNICAL SUPPORT  
TECHNICAL SERVICES GROUP


# SHARP
 
## Configuring your XBOX 360


Before you connect your XBOX 360, please ensure that you have told your LCD-TV that you are going to use component signal input and ensure the cable to your Sharp LCD-TV has been configured correctly.

Using the Sharp LC-42XD1E as an example:

1. When you power on the XBOX 360, your unit will output 720P and display the following screen.

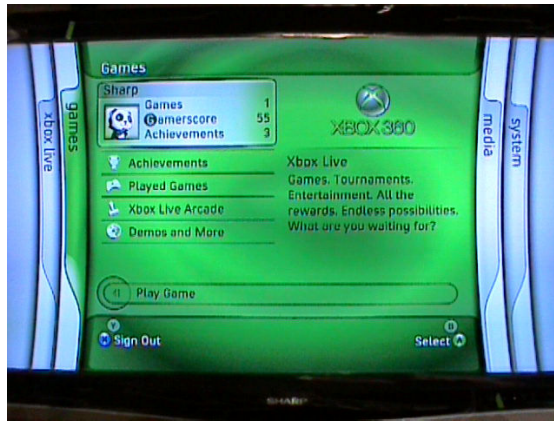

 2. Using the cursor keys on your controller, move to "System".

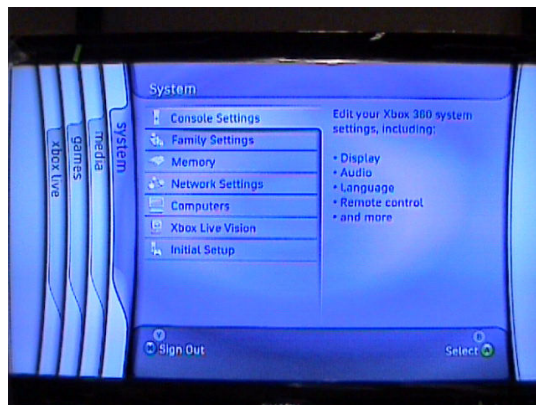


3. Press the "Select" button on your controller.




SHARP ELECTRONICS (UK) LTD  
TECHNICAL SUPPORT  
TECHNICAL SERVICES GROUP

# SHARP

 - Using the cursor keys on your controller, move to “Display”, and press the “Select” button.

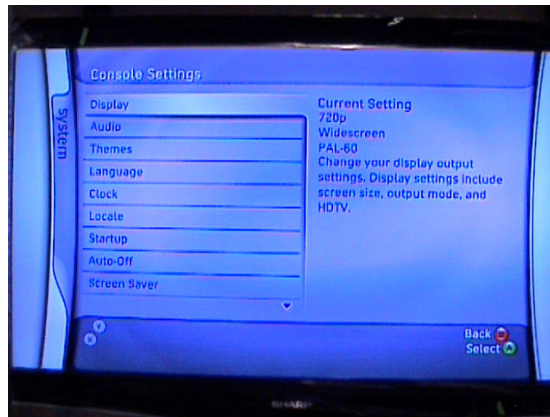


 - Using the cursor keys on your controller, move to “HDTV Settings”, and press the “Select” button.

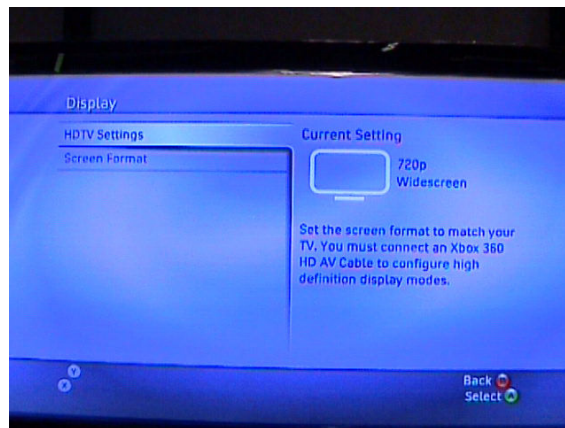

- Using the cursor keys on your controller, move to the output of your choice, and press the “Select” button.

**Note – Sharp LCD-TV's only support 480p, 720p and 1080i output via component. 1080p is supported via the 2 x HDMI inputs (HDMI cable not available from Microsoft).**

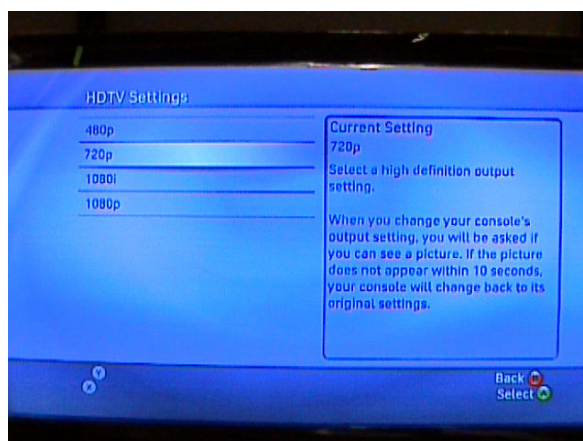 


**Note – This screen is only available after downloading the XBOX 360 update from XBOX Live. If the XBOX 360 update has not been applied, you can only select 720p and 1080i.**

SHARP ELECTRONICS (UK) LTD  
TECHNICAL SUPPORT  
TECHNICAL SERVICES GROUP




# SHARP

 7. After selecting your output, the screen will blank for a few seconds and then display the following.

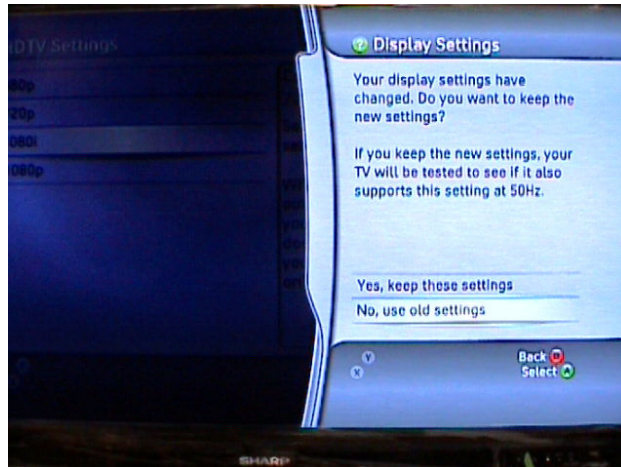

 8. Follow the on-screen instructions using the cursor keys on your controller and pressing the "Select" button. The screen will blank again for a few seconds switching to 50hz. The following will be displayed.

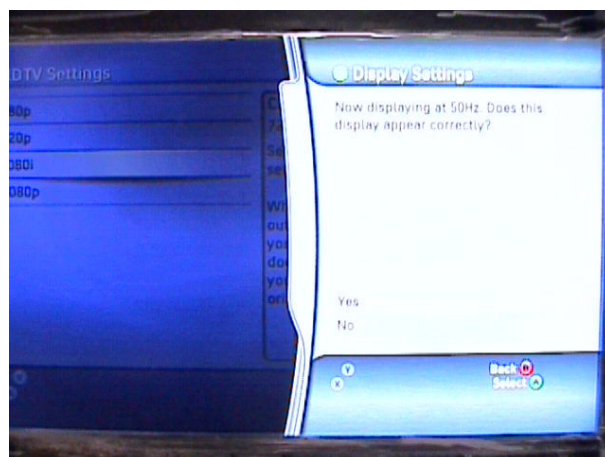

9. Follow the on-screen instructions using the cursor keys on your controller and pressing the "Select" button.

You have now configured your XBOX 360 for use with your Sharp LCD-TV.

If you require additional support or have any questions about your Sharp LCD-TV, please contact the Sharp helpdesk on – 0870 787 4837.

**Please keep with the operation manual for future reference**

**SHARP ELECTRONICS (UK) LTD  
TECHNICAL SUPPORT  
TECHNICAL SERVICES GROUP**